


INSTALLATION INSTRUCTIONS

INCLUDED:
Mounting Bracket's
U-Bolts
Hardware Pack

Cordless Drill
17mm Socket
17mm Wrench

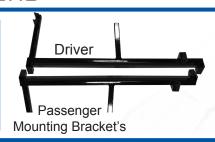




Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

To begin place supplied U-bolt over front of frame as shown



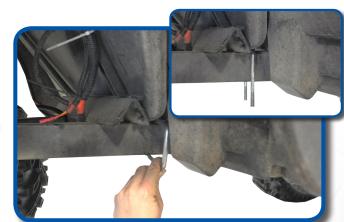





Slide bracket under frame using angled tabs on top of bracket as a guide. Hand tighten supplied 10mm hardware to hold bracket to U-Bolt.

Slide rear bracket mount on to factory bolt located under battery box. Use supplied 10mm hardware and tighten with 17mm socket.







Using a 17mm socket tighten hardware. Be sure the U-bolt is tightened evenly as shown.

Using the 10mm x 55mm hardware attach step to bracket with 17mm socket and wrench. Once all 4 bolts are in place then tighten.

\*Repeat steps 1-5 on other side.



## INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

E-Z-GO®, TXT®, and RXV® are registered trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated with or sponsored by Textron® or E-Z-GO®.

## Pack 1

2 – Square U-Bolts 10mm x 71mm x 117mm 8 – 10mm x 55mm Hex head bolts 22 – 10mm flat washers 14 – 10mm lock nuts

