

MADJAX

Part # 14-034 Storm Brush Gaurd



KIT CONTENTS

- Brush Guard
- Passenger & Driver Side Mounting Brackets
- Passenger & Driver Side Support Brackets
- Hardware Pack

TOOLS NEEDED

- 3/8 Ratchet
- 5mm Hex Socket
- 17mm Socket
- 13mm Wrench
- Level




MadJax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product.

STEP 1

A) Starting on the Pass side place the U-bolts around the frame as shown.

B) Place the **Pass Side Mounting Bracket** to the inside of the factory shock and secure to the U-bolts using the provided M10 hardware. Note the **Stiffener Arm** on the top. Use a 17mm socket to snug up the bracket for readjustment later. **Do NOT fully tighten hardware.**

Note: The Pass Side Bracket stiffener arm should be up as shown.

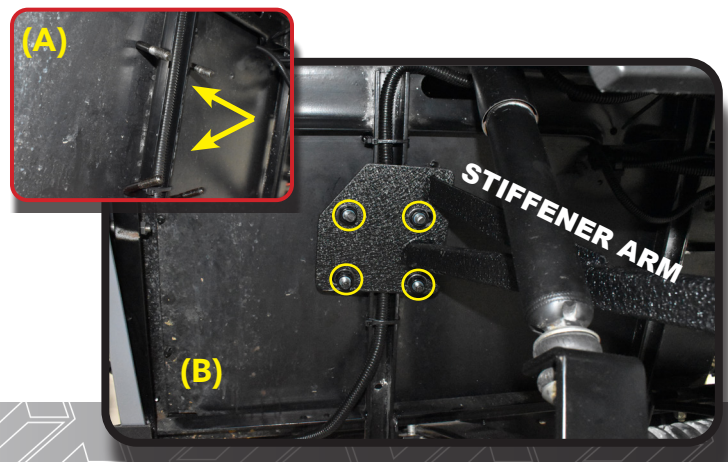


STEP 2

A) On the Driver side place the U-bolts around the frame as shown.


B) Attach the **Driver Side Mounting Bracket** to the U-bolts using the M10 hardware. Note the **Stiffener Arm** on the bottom. Use a 17mm socket to snug up the bracket for readjustment later. **Do NOT fully tighten hardware.**

Note: Driver Side stiffener arm will be on the bottom as shown.

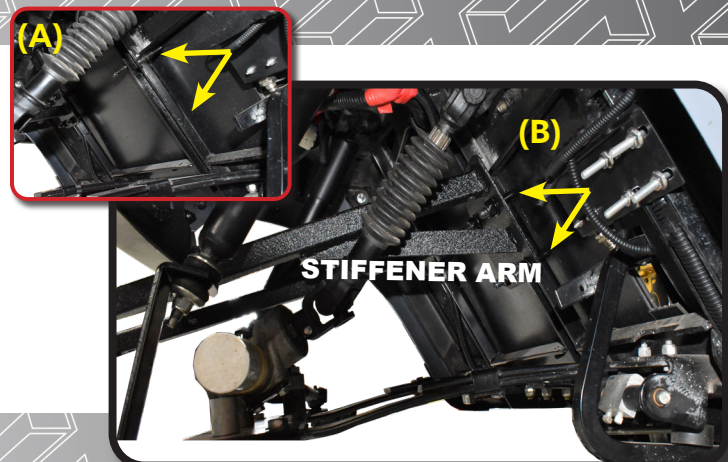

STEP 3

Install the **Pass Side Support Bracket** to the front of the **Mounting Bracket** as shown with the M8 x 50mm button head bolt, nut, and washers. Loosly secure with a 13mm wrench and socket.

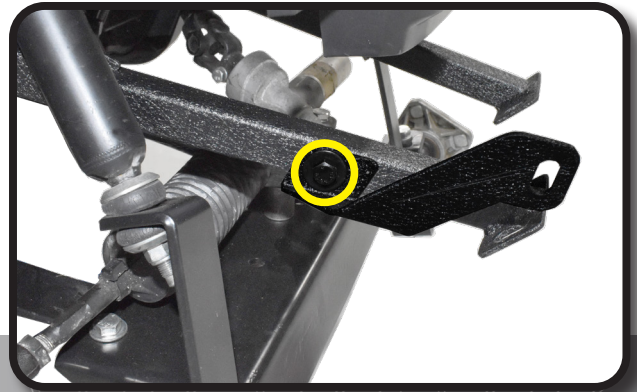

STEP 4

Attach the **Driver Side Support Bracket** to the **Mounting Bracket** with the M8 x 50mm button head bolt, nut, lock washers, and washers. Loosly secure with a 13mm wrench and socket.



STEP 5

Using the provided M8 x 25 button head bolts, nuts, lock washers, and flat washers attach the **Brush Guard** to the **Mounting & Support Brackets**.

Using the slotted holes set the Brush Guard to your desired height, then use a level to ensure Brush Guard is straight. Tighten all hardware from previous steps.



HW Pack

- 4 - M10 U-Bolts (Steps 1 & 2)
- 8 - M10 Flange Nuts
- 2 - M8x50mm Button Head Bolts (Steps 3 & 4)
- 6 - M8x25mm Button Head Bolt (Step 5)
- 12 - M8 Flat Washers
- 8 - M8 Lock Washers
- 8 - M8 Flange Nuts