



WINDSHIELD

WILL FIT E-Z-GO® TXT™

INSTALLATION INSTRUCTIONS MJWS2000

INCLUDED:

- WINDSHIELD
- 2 STRUT BRACKETS
- HARDWARE



Windshield




2 Strut Brackets



Hardware

1

Attach hardware on both sides of the front struts as shown.

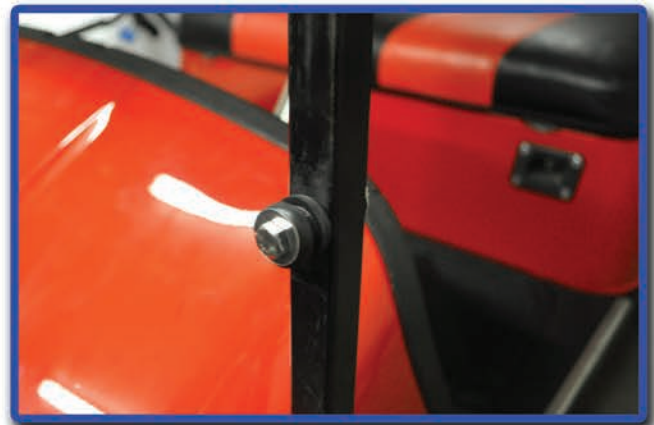

2

Remove plastic from all four sides of the windshield. Attach strut brackets to each side of the windshield as shown.



Clamps on the windshield attach to the struts when you want the windshield lifted.



VISIT WWW.MYMADJAX.COM FOR ONLINE VIDEOS



E-Z-GO®, TXT™, RXV™ are trademarks of Textron Innovations, Inc. ("Textron"). Reference to Textron's trademarks and products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected or affiliated with or sponsored by Textron.