



# 14-037 APEX BRUSH GUARD INSTALLATION INSTRUCTIONS

Fits MADJAX® APEX BODY KIT (E-Z-GO® RXV)



SCAN FOR INSTALL VIDEO

ITEMS INCLUDED

QTY

TOOLS NEEDED



LOWER MOUNTING BRACKETS (P/D)	2	SOCKET, 15MM
M8X80MM BOLTS	4	SOCKET, 13MM
M8X25MM BOLTS	2	SOCKET, 10MM
M8 WASHER	12	WRENCH, 13MM
M8 LOCK WASHER	6	
M8 NUTS	6	
REINFORCEMENT BRACKETS (P/D)	2	
M6 BUTTON HEAD HEX DRIVE BOLTS	4	
M6 LOCK WASHER	4	
M6 WASHER	8	
M6 NUT	4	
ALLEN WRENCH	1	
BRUSH GUARD	1	

## STEP 1:

Using a 15mm socket, remove the bolt holding the lower valance on both sides of the APEX body.



## STEP 2:

Align the passenger side lower mounting bracket with the mounting holes on the valance, and slide it into place as shown.



## STEP 3:

Take the longer M8 bolts and loosely secure the lower mounting tabs to the chassis using a 13mm wrench and socket. Be sure leave them loose enough to fit the remaining pieces of the brush guard on. Repeat steps 2-3 on the driver's side to mount the lower mounting bracket to the chassis.






#### STEP 4:

Locate the passenger reinforcement bracket, and insert it behind the inner bolt holding the mounting bracket as shown. Loosely tighten the bolt to allow you to maneuver the reinforcement bracket into place.



#### STEP 5:

Align the brush guard with the body valence. Using the provided allen wrench and a 10mm socket, secure the button head bolts to the brush guard on the lower mounting brackets as shown.

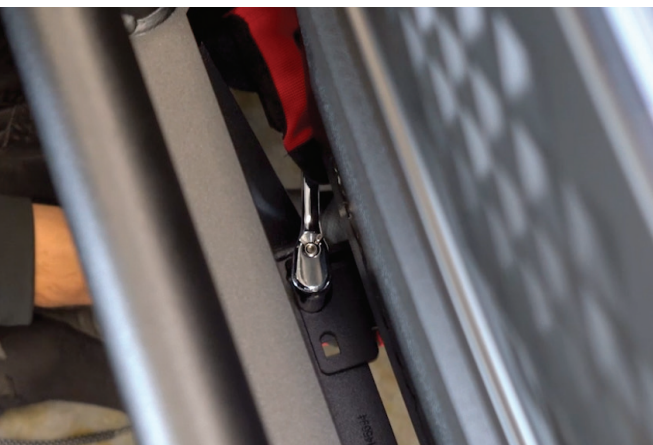

## STEP 6:

Using a 13mm socket and wrench secure the 25mm M8 bolts to the reinforcement brackets on the brush guard using washers, lock washers, and lock nuts.



## STEP 7:

To complete installation, tighten all hardware to ensure the brush guard is securely fastened to the chassis.







**INSTALLATION COMPLETE**