





26-007/26-011
84" TOP FOR GENESIS 250/300 SEAT KIT
WILL FIT CLUB CAR® PRECEDENT®
INSTALLATION INSTRUCTIONS

INCLUDED:

- Front Brackets
- Rear Brackets
- Rear Struts
- Stiffener Brackets
- Hardware Pack

TOOLS NEEDED:



- Cordless Drill
- 5/16" Drill Bit
- 17mm Socket
- 17mm Wrench
- 13mm Socket
- 10mm Socket
- 10mm Wrench
- C-Clamps

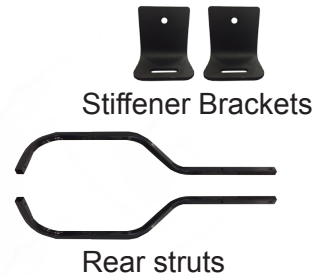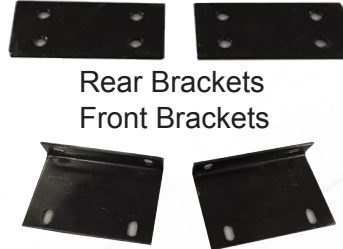

Madjax recommends professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.


To begin remove factory canopy. Do not retain front or rear factory hardware as they will be replaced.

Using four 6mm x 40mm Hex head bolts attach front brackets to outside of front struts as shown. Notice the slotted hole on the short side of the bracket, this needs to be mounted towards rear of cart.

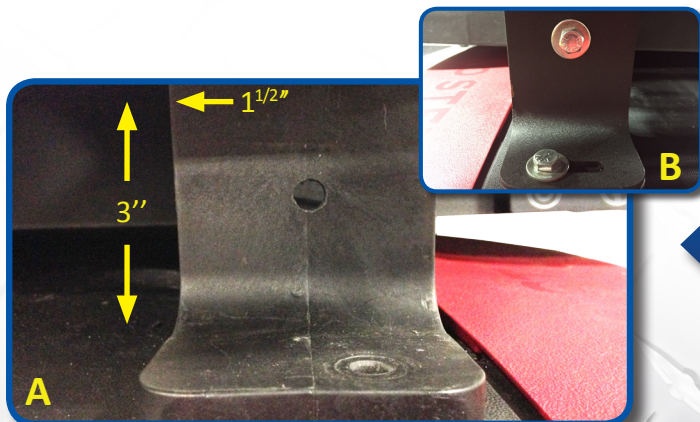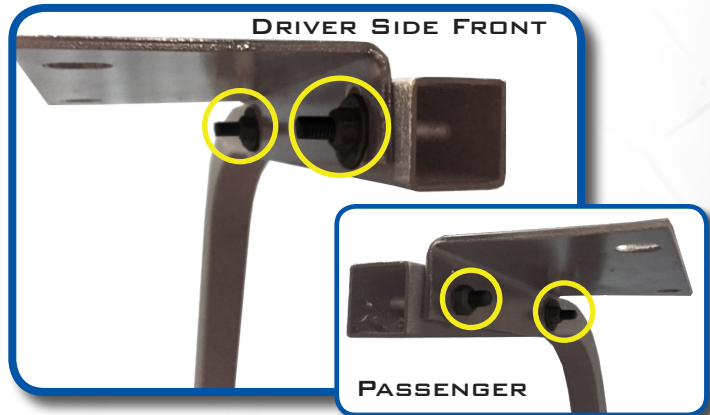

(A) Measure up 3" from cart body and over 1-1/2" from side of bracket.

(B) Using 5/16" bit, drill hole for the mounting bracket. Attach stiffener bracket using 8mmx35mm and 8mmx50mm fine thread bolts.

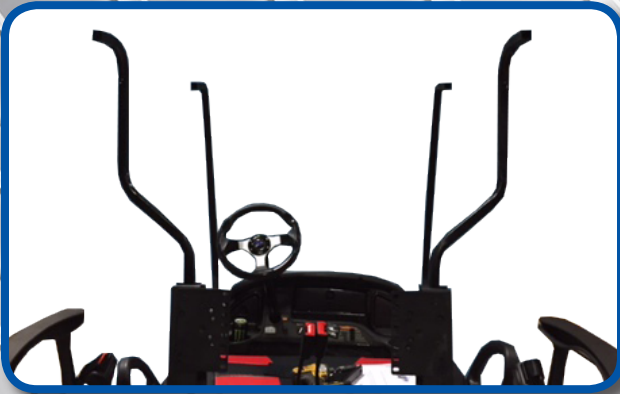


To attach the new struts to your G250/300 seat kit you will first need to insert them into the main brackets as shown. DO NOT drill any holes in strut until Step 7.

3

A) Attach rear brackets to rear struts using 6mm x 40mm carriage bolts as shown. Be sure to mount bracket using the smaller diameter holes.

B) Carriage bolt will secure to strut once hardware is tightened.

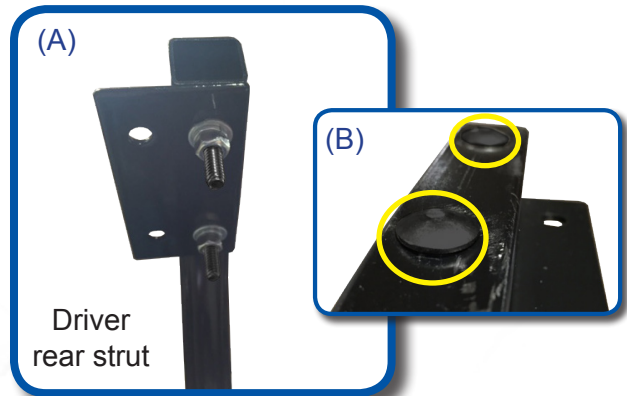

4




Now insert two 8mm x 25mm carriage bolts into side extrusion at each corner of top. These bolts will secure top extrusion to strut brackets.


5

Connect the strut brackets to the top extrusion using 8mm carriage bolts, hand tighten hardware first. Once all bolts are in place then tighten.

Note: If installing a windshield make sure to install windshield before tightening to hardware.

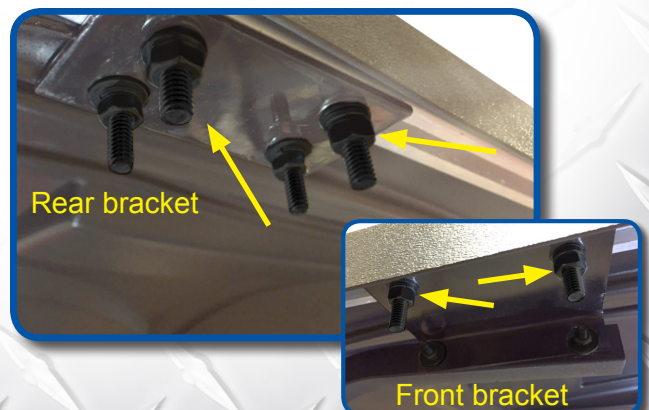

6

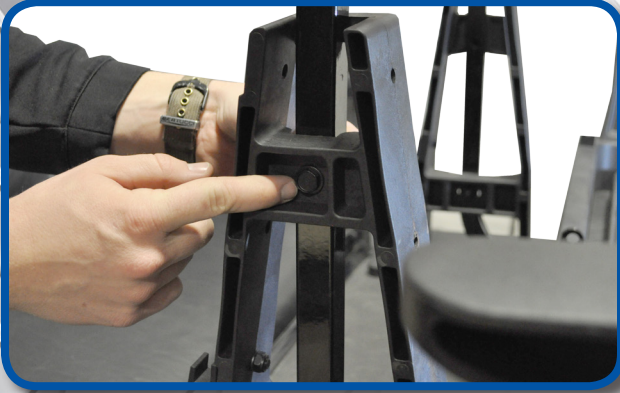

Now that your top is attached the rear struts can be secured. Using C-Clamps set rear struts to desired height. Using a 5/16" Drill bit, drill through struts using main mounting bracket holes as a guide. Attach with hardware from Pack#1 of your seat kit.

INSTALLATION COMPLETE

VISIT WWW.MYMADJAX.COM FOR MORE INSTALLATION VIDEOS.

Club Car®, Club Car® Precedent®, and Club Car® DS® are registered trademarks of Ingersoll Rand, Inc. ("Ingersoll Rand"). Reference to Club Car®, Club Car® Precedent®, or Club Car® DS® or any of Ingersoll Rand's trademarks, word marks, or products is only for purposes of identifying golf carts with which this Madjax product is compatible. Madjax products are aftermarket parts and are not original equipment parts. Madjax is not connected to, affiliated with, sponsored by, or endorsed by Ingersoll Rand or any of its subsidiary companies.

DACROMET HARDWARE PACK

- 4 - 6mm x 40mm Hex head bolts
- 4 - 6mm x 40 carriage bolts
- 8 - 8mm x 25mm carriage bolts
- 2 - 8mm x 35mm Hex head bolts
- 2 - 8mm x 50mm Fine thread bolts
- 12 - 6mm Flat washers
- 4 - 6mm Lock washers
- 4 - 6mm Nylock nuts
- 4 - 6mm Nuts
- 14 - 8mm Flat washers
- 8 - 8mm Lock washers
- 2 - 8mm Nylock nuts
- 8 - 8mm Nuts

