



PART#04-039

INNER BASKET

FOR CLUB CAR CARRYALL & DS

INSTALLATION INSTRUCTIONS

INCLUDED:

- (1) Basket
 - (2) Brackets
- Hardware Pack
- (4) 6mmx18mm Bolts
 - (8) 6mm Flat Washers
 - (4) 6mm Nylock Nuts

TOOLS NEEDED:


- Drill
- 13mm Socket
- 14mm Wrench
- 10mm Socket
- 10mm Wrench



We recommend professional installation. If you choose to not have this product installed by a professional, we highly recommend that you exercise caution, care, and patience when installing this product as it involves drilling holes into your cart's body.

1
Install basket mounts to cart using OEM mounting bolts at front cowl trim and strut mounts as shown.

Note: Front struts removed for instructional purposes only. Brackets go under the front strut.

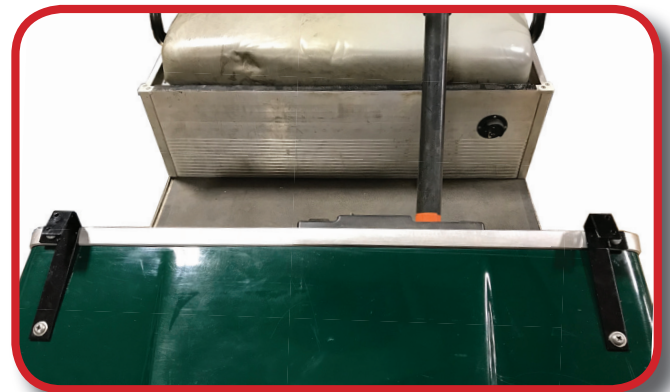

2
Attach basket to mounting brackets using 6mm hardware provided as shown. Once all hardware is in place, then tighten.



INSTALLATION COMPLETE